


Hand Sanitizer Stand for Dispenser - HSD-O Series

1. The bottom of the base has bumpers pre-installed. This bottom side faces the floor. There are two upright sections. Take the first upright section and find the end without a hole in the side. Secure this end to the base using the flat head/tapered screws provided, with the hole facing the (shorter) back end of the base. It is normal for the screws to protrude slightly once fully tightened.
2. Slide the steel joiner into the top of the lower upright section, and attach using the large round head screw provided. Slide the upper upright over the joiner bracket, aligning the hole in the upright section with the hole in the joiner bracket, and connect it to the joiner using the large round head screw provided.
3. Align the top holes of the dispenser plate with the threaded holes at the top of the upright, then use the two round head screws provided to mount the dispenser plate to the top of the upright. Tighten fully, don't over tighten.
4. The dispenser plate includes slots. If the holes on your dispenser align with the slots, line up the top holes of the dispenser with the slots and use the screws and nuts to attach. Tighten fully, don't over tighten. If the holes on your dispenser do not line up with the slots, you can use the large foam tape provided with the stand (or one provided on your dispenser) to attach to the back plate. If the back plate isn't clean, clean first before attaching the adhesive. Make sure the dispenser is empty (no hand sanitizer) before attaching with the foam tape and allow foam adhesive to set overnight (minimum 12 hours) before filling with sanitizer.
5. Put your hand under the dispenser and lift it up towards the dispenser. Then remove your hand and then repeat. If your dispenser dispenses, move on to step 6. If your dispenser will not continue to dispense after the first dispense (or continues to dispense long after you've removed your hand), find the black foam pad that was included with your dispenser. Attach the black foam pad to the bottom of the dispenser plate as shown below. This black foam pad helps some older sensors distinguish between your hand and the stand.
6. **FOR OPTIONAL FRAME Installation:** Place the male thread attached to the bottom of the frame in the threaded hole at the top of the dispenser plate, and twist it until tight. If needed, you can also tighten the screw inside the frame with a Phillips head screwdriver. Drop graphic up to 3/16" thick into the frame from above.

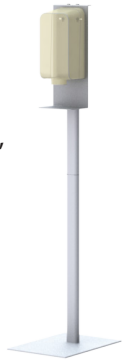

HSDM-O-RB-S shown



HSD8511-O-RB-S shown

1.

It is normal for the screws to protrude slightly once fully tightened.

2. Back View

Joiner bracket

3. Back View

4.

If holes do not align, use adhesive backing on dispenser to attach.

Adhesive backing

5.

If dispenses correctly: Go to Step 6

If nothing comes out second time OR continues dispensing without hand Add Black foam pad

Foam pad

Dispenses correctly with foam pad

6.